

## Basic Line Satellite Splitters

### Splitters

Frequency (MHz)	Insertion loss (dB)					Isolation OUT-OUT					Item no.
	5-40	40-1000	1000-1750	1750-2050	2050-2400	5-40	40-1000	1000-1750	1750-2050	2050-2400	
BSS 02	<4.5	<4.8	<5.5	<6.5	<7.0	>17	>22	>20	>20	>20	40700
BSS 03	<7.5	<8.0	<9.5	<10.5	<11.5	>18	>21	>20	>20	>20	40703
BSS 04	<8.5	<9.0	<10.5	<12.0	<13.0	>20	>22	>20	>20	>20	40704
BSS 06	<12.0	<13.0	<14.5	<16.5	<17.5	>20	>22	>20	>20	>20	40706
BSS 08	<13.0	<13.5	<16.0	<18.0	<19.0	>20	>22	>20	>20	>20	40708

